


Register your product and get support at


[www.philips.com/welcome](http://www.philips.com/welcome)

FC8139-FC8130



**PHILIPS**

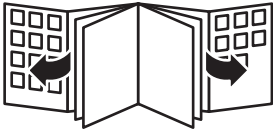

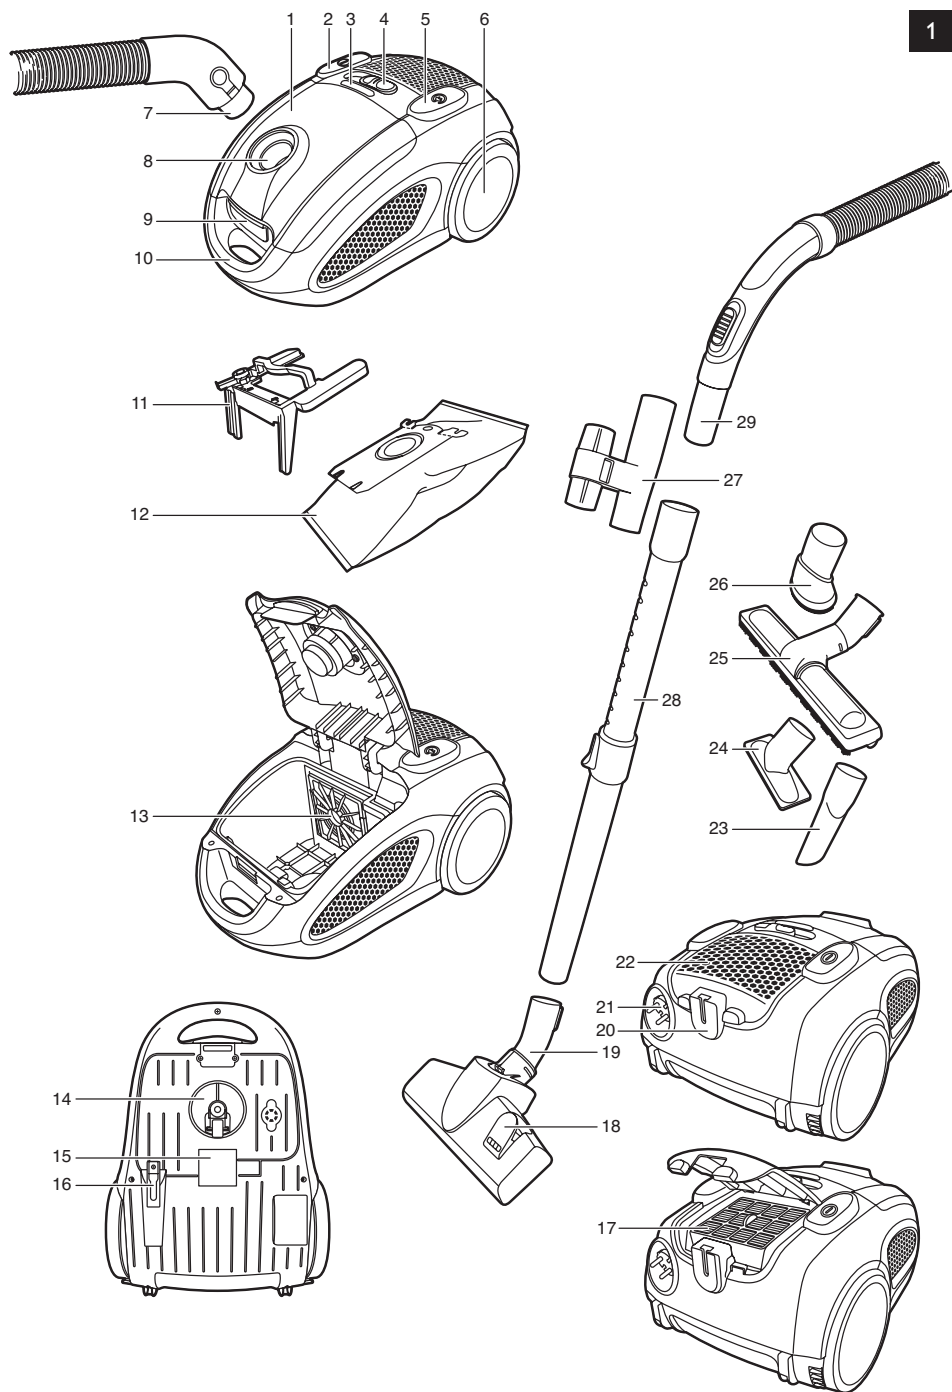



<b>ENGLISH</b>	6
<b>ESPAÑOL</b>	11
<b>FRANÇAIS</b>	16
<b>INDONESIA</b>	21
한국어	26
<b>BAHASA MELAYU</b>	31
<b>PORTUGUÊS</b>	37
ภาษาไทย	43
<b>TIẾNG VIỆT</b>	48
繁體中文	53
简体中文	58
العربية	67
فارسی	72

## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## General description (Fig. 1)

- 1 Cover
- 2 On/off button
- 3 Dustbag full indicator
- 4 Electronic suction power control
- 5 Cord rewind button
- 6 Rear wheel
- 7 Hose connector
- 8 Hose connection opening
- 9 Cover release tab
- 10 Handle
- 11 Dustbag holder
- 12 Dustbag
- 13 Motor protection filter
- 14 Swivel wheel
- 15 Type plate
- 16 Storage slot
- 17 HEPA exhaust filter
- 18 Rocker switch for carpet/hard floor settings
- 19 Combination nozzle
- 20 Parking slot
- 21 Mains cord with plug
- 22 Exhaust filter grille
- 23 Crevice nozzle
- 24 Small nozzle
- 25 Hard floor nozzle (specific types only)
- 26 Small brush
- 27 Accessory holder
- 28 Telescopic tube
- 29 Hose with handgrip and suction power slide

## Important

Read this user manual carefully before you use the appliance and save it for future reference.

### Danger

- Never suck up water or any other liquid. Never suck up flammable substances and do not suck up ashes until they are cold.

### Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the mains cord, the plug or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth when it is connected to the vacuum cleaner and the vacuum cleaner is switched on.

### **Caution**

- Do not suck up large objects as this may cause the air passage in the tube or hose to become obstructed.
- When you use the vacuum cleaner to vacuum ashes, fine sand, lime, cement dust and similar substances, the pores of the dustbag and the motor protection filter become clogged. If you notice a strong decrease in suction power, replace the dustbag and clean the motor protection filter.
- Always unplug the appliance before you replace the dustbag or clean the filters.
- Never use the appliance without a dustbag or the motor protection filter. This could damage the motor and shorten the life of the appliance. We advise you to use Philips s-bag □ double-layer paper dustbags.

### **Electromagnetic fields (EMF)**

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

## **Preparing for use**

### **Hose**

- 1** To connect the hose, push it into the appliance ('click') (Fig. 2).
- 2** To disconnect the hose, press the release buttons (1) and pull the hose connector out of the hose connection opening (2). (Fig. 3)

### **Telescopic tube**

- 1** To connect the tube to the handgrip of the hose, insert the narrow section into the wider section while turning a little (Fig. 4).  
To disconnect the tube, pull while turning a little.
- 2** Adjust the telescopic tube to the length you find most comfortable during vacuuming. Press the slide on the tube (1) and push the lower tube part downwards or pull it upwards (2) (Fig. 5).

### **Combination nozzle**

You can use the combination nozzle on carpet (with the brush strips folded in) or on hard floors (with the brush strips folded out).

- To clean hard floors, push the rocker switch on top of the combination nozzle with your foot to make the brush strips come out of the nozzle housing. (Fig. 6)
- To clean carpet, push the rocker switch on the other side to make the brush strips disappear into the housing. (Fig. 7)

### **Hard floor nozzle (specific types only)**

- The hard floor nozzle is designed for gentle cleaning of hard floors (Fig. 8).

### **Accessory holder**

You can store two accessories in the accessory holder at the same time.

- 1** Connect the accessory holder to the tube (1) and then connect the hose to the accessory holder (2) (Fig. 9).

- 2 To store accessories in the accessory holder, push them onto the holder (Fig. 10).

### **Crevice nozzle, small nozzle and small brush**

- 1 Connect the crevice nozzle, small nozzle or small brush to the handgrip of the hose or to the tube. To do this, insert the handgrip or tube into the accessory while turning a little. (Fig. 11)
  - Use the crevice nozzle to clean narrow corners or hard-to-reach places.
  - Use the small nozzle to clean small areas, e.g. the seats of chairs and sofas.
  - Use the small brush to clean computers, bookshelves etc.

## **Using the appliance**

### **Vacuum cleaning**

- 1 Pull the cord out of the appliance and insert the mains plug into the wall socket.
- 2 Press the on/off button on top of the appliance with your foot to switch on the appliance. (Fig. 12)

*Note: If you want to pause for a moment, insert the ridge on the nozzle into the parking slot to park the tube in a convenient position (Fig. 13).*

*Note: You can carry the vacuum cleaner by the handle at the front of the appliance (Fig. 14).*

### **Adjusting suction power**

You can adjust the suction power with:

- the suction power slide on the handgrip (Fig. 15).
- the electronic suction power control on the vacuum cleaner (Fig. 16).

## **Cleaning and maintenance**

- 1 Switch off and unplug the appliance before you remove and clean any parts.
- 2 Clean the appliance and its parts with a damp cloth.

Do not clean any part of the vacuum cleaner in the dishwasher.

### **Cleaning the HEPA exhaust filter**

To maintain optimal performance, clean the HEPA filter each time you replace the dustbag.

- 1 To open the HEPA exhaust filter grille, grab the tabs and pull the grille upwards to remove it from the appliance (Fig. 17).
- 2 Remove the HEPA exhaust filter.
- 3 Rinse the pleated side of the HEPA exhaust filter under a hot slow-running tap.
  - Hold the filter in such a way that the pleated side points upwards and the water flows parallel to the pleats. Hold the filter at an angle so that the water washes away the dirt inside the pleats (Fig. 18).
  - Turn the filter 180° and let the water flow along the pleats in the opposite direction (Fig. 19).
  - Continue this process until the filter is clean.

Never clean the HEPA exhaust filter with a brush (Fig. 20).

*Note: Cleaning does not restore the original colour of the filter, but does restore its filtration power.*

- 4 Carefully shake the water from the surface of the HEPA exhaust filter. Let the HEPA exhaust filter dry completely before you put it back into the vacuum cleaner.
- 5 Place the dry HEPA exhaust filter back into the appliance.



- 6 To close the HEPA exhaust filter grille, first align the lugs on the top of the grille with the slots in the appliance (1). Then press the tabs downwards until the grille locks into place (2) ('click') (Fig. 21).

### **Cleaning the motor protection filter**

---

To maintain optimal performance, clean the motor protection filter at least once a year.

- 1 Pull the cover upwards to open it (Fig. 22).
- 2 Lift the dustbag holder out of the appliance. (Fig. 23)

Make sure you hold the dustbag upright when you lift it out of the appliance.

- 3 Pull the filter holder with the motor protection filter out of the appliance. (Fig. 24)
- 4 Take the motor protection filter out of the holder. Shake the motor protection filter over a dustbin to clean it.
- 5 Put the filter in the filter holder and slide the filter holder back into the appliance.
- 6 Put the dustbag holder back into the appliance.

### **Replacement**

---

#### **Replacing the dustbag**

---

- Replace the dustbag as soon as the dustbag-full indicator has changed colour permanently, i.e. even when the nozzle is not placed on the floor (Fig. 25).

- 1 Switch off and unplug the appliance.
- 2 Pull the cover upwards to open it.
- 3 Lift the dustbag holder out of the appliance.

Make sure you hold the dustbag upright when you lift it out of the appliance.

- 4 Pull at the cardboard tag to remove the full dustbag from the holder (Fig. 26).  
 D When you do this, the dustbag is sealed automatically.
- 5 Slide the cardboard front of the new dustbag into the two grooves of the dustbag holder as far as possible. (Fig. 27)
- 6 Put the dustbag holder back into the vacuum cleaner (Fig. 28).

*Note: If no dustbag has been inserted, you cannot close the cover.*

- 7 Push the cover downwards to close it.

#### **Replacing the HEPA exhaust filter**

---

Always unplug the appliance before you replace a filter.

Replace the HEPA exhaust filter every 12 months.

- To remove the old filter and place the new filter, follow the instructions for removing and placing the filters in section 'Cleaning the HEPA exhaust filter' in chapter 'Cleaning and maintenance'.

#### **Ordering dustbags**

---

- Philips Classic s-bag □ synthetic dustbags are available under type number FC8021.
- Philips Clinic s-bag □ high filtration synthetic dustbags are available under type number FC8022.
- Philips Anti-odour s-bag □ synthetic dustbags are available under type number FC8023.
- Reusable dustbags (some countries only) are available under code number 4322 004 93370.

*Note: Please visit [www.s-bag.com](http://www.s-bag.com) for more information about the s-bag.*

### **Ordering filters and accessories**

---

- HEPA exhaust filters are available under type number FC8070.

### **Storage**

- 1** Switch off and unplug the appliance.
- 2** Press the cord rewind button to rewind the cord (Fig. 29).
- 3** Put the appliance in upright position. To attach the nozzle to the appliance, insert the ridge on the nozzle into the storage slot.

*Note: To ensure stable storage of the telescopic tube, adjust the tube to the shortest length.*

### **Environment**

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 30).

### **Guarantee and service**

If you need service or information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

### **Troubleshooting**

#### **1 The suction power is insufficient**

- Perhaps the dustbag is full.

If necessary, empty the dustbag.

- Perhaps the filters need to be cleaned or replaced.

If necessary, clean or replace the filters.

- Perhaps the suction power slide on the handgrip is open.

Close the slide.

- Perhaps the electronic suction power control is set to a low setting.

Set the control to a higher setting.

- Perhaps the nozzle, tube or hose is blocked up. (Fig. 31)

To remove the obstruction, disconnect the blocked-up item and connect it (as far as possible) the other way round. Switch on the vacuum cleaner to force the air through the blocked-up item in opposite direction.

## محیط زیست

- دستگاه را مانند سایر زیاله های خانگی دور نریزید، و آن را در محلهای تعیین شده دور بریزید. با انجام این کار شما به حفظ محیط زیست کمک می کنید (شکل ۳۰).

## ضمانت و سرویس

اگر به سرویس یا اطلاعات نیاز داشتید یا اگر با مشکلی روبرو شدید، به سایت اینترنتی Philips به نشانی [www.philips.com](http://www.philips.com) مراجعه کرده یا با مرکز مراقبت از مشتری Philips در کشور خود تماس بگیرید (این شماره تلفن را در برگه ضمانت جهانی پیدا خواهید کرد). اگر در کشور شما مرکز حمایت از مشتری وجود ندارد به فروشنده لوازم Philips مراجعه کنید.

## عیب یابی

## ۱ قدرت مکش کافی نیست

- شاید کیسه جارو پر شده است.
- در صورت لزوم، کیسه جارو را خالی کنید.
- شاید فیلترها نیاز به تمیز شدن یا تعویض داشته باشند.
- در صورت لزوم، آنان را تمیز یا تعویض کنید.
- شاید کشویی تنظیم قدرت مکش روی دستگیره باز باشد.
- کشویی را ببندید.
- شاید کنترل قدرت مکش را در حالت ضعیف قرار داده اید.
- قدرت مکش را روی حالت قویتر تنظیم نمایید.
- بررسی کنید که دهانک، لوله یا شیلنگ مسدود نشده باشند. (شکل ۳۱)
- برای رفع انسداد مورد مسدود شده را باز کرده و از طرف دیگر وصل کنید (تا آنجا که ممکن است). جارو برقی را روشن کنید تا هوا را با فشار به درون مورد مسدود شده در جهت مخالف وارد کنید.

۳ نگهدارنده فیلتر و فیلتر حفاظت موتور را از دستگاه بیرون بیاورید. (شکل ۲۴)

۴ فیلتر حفاظت موتور را از نگهدارنده فیلتر بیرون بیاورید. ۳ برای تمیز کردن فیلتر حفاظت موتور، آن را روی یک سطل تکان دهید.

۵ فیلتر جدید را درون نگهدارنده قرار داده و نگهدارنده فیلتر را مجدداً در دستگاه جا بزنید.

۶ کیسه را مجدداً در داخل دستگاه قرار دهید.

## تعویض

### تعویض کیسه جارو

— کیسه جارو را بمحض تغییر رنگ دائمی نشانگر پر بودن کیسه جارو تعویض کنید، حتی اگر دهانک روی کف زمین قرار داده نشده باشد (شکل ۲۵).

۱ دستگاه را خاموش کرده و دوشاخه را از پریز خارج کنید.

۲ قاب را بطرف بالا کشیده تا باز شود.

۳ نگهدارنده کیسه را از دستگاه خارج کنید.

هنگامی که کیسه را از دستگاه بیرون می کشید، مطمئن شوید که کیسه را به طرف بالا نگاه داشته اید.

۴ لبه مقوایی را بکشید تا کیسه جاروی پر شده از نگهدارنده جدا شود (شکل ۲۶).

هنگامی که این کار را انجام می دهید، کیسه جارو بطور خودکار بسته خواهد شد.

۵ بخش مقوایی کیسه جارور جدید را تا آنجا که می شود در شکافهای نگهدارنده کیسه فشار دهید. (شکل ۲۷)

۶ قاب گیره کیسه جارو را دوباره در جارو برقی جا بزنید (شکل ۲۸).

توجه: اگر کیسه جارو را جا نزده باشید، نمی توانید قاب را ببندید.

۷ قاب را برای بستن به پایین فشار دهید.

### تعویض فیلتر خروجی HEPA

همیشه دستگاه را قبل از تعویض فیلتر از برق جدا کنید.

فیلتر خروجی HEPA را هر ۱۲ ماه یکبار تعویض کنید.

— برای باز کردن فیلتر قدیمی و قرار دادن فیلتر جدید، دستورالعملهای درآوردن و نصب فیلتر ها را در بخش "تمیز کردن فیلتر خروجی HEPA" در بخش "تمیز کردن و نگهداری" را انجام دهید.

### سفارش دادن کیسه های جارو

- کیسه های ترکیبی Philips Classic s-bag® تحت شماره FC8021 موجود می باشند.
- کیسه های ترکیبی با فیلتراسیون بالای Clinic s-bag® تحت شماره FC8022 موجود می باشند.
- کیسه های ضد بوی ترکیبی Philips s-bag® تحت شماره FC8023 موجود می باشند.
- کیسه های قابل استفاده مجدد (فقط در برخی از کشورها) تحت شماره کد 4322 004 93370 موجود می باشند.

توجه: لطفاً از [www.s-bag.com](http://www.s-bag.com) برای اطلاعات بیشتر در مورد کیسه s-bag بازدید کنید.

### سفارش دادن لوازم جانبی و فیلترها

— فیلترهای خروجی HEPA تحت شماره FC8070 موجود می باشند.

## نگهداری

۱ دستگاه را خاموش کرده و دوشاخه را از پریز خارج کنید.

۲ دکمه جمع کردن سیم را فشار دهید تا سیم برق جمع شود (شکل ۲۹).

۳ دستگاه را در وضعیت عمودی قرار دهید. دهانک را با وارد کردن لبه دهانک در شکاف ذخیره، به دستگاه وصل کنید.

توجه: برای اطمینان از ثابت بودن لوله تلسکوپی در محل نگهداری، لوله را در کوتاهترین حالت قرار دهید.

## جارو کردن

۱ سیم برق را از دستگاه بیرون بکشید و دوشاخه را در پریز دیواری بزنید.

۲ دکمه روشن/خاموش در بالای دستگاه را برای روشن کردن دستگاه با پای خود فشار دهید (شکل ۱۲).

توجه: اگر می خواهید برای مدتی کار را متوقف کنید، می توانید لوله را با وارد کردن لبه دهانک در شکاف پارکینگ در موقعیتی مناسب قرار دهید (شکل ۱۳).

توجه: می توانید جارو را بصورت عمودی با استفاده از دستگیره جلوی دستگاه حمل کنید (شکل ۱۴).

## تنظیم کردن قدرت مکش

می توانید قدرت مکش را با استفاده از موارد زیر تنظیم کنید:

- سوئیچ کشویی تنظیم قدرت مکش روی دستگیره (شکل ۱۵)
- دکمه قدرت مکش در جارو برقی (شکل ۱۶).

## تمیز کردن و نگهداری

۱ قبل از جدا کردن و تمیز کردن قسمتهای مختلف، دستگاه را خاموش کرده و دوشاخه آن را از پریز بیرون بکشید.

۲ دستگاه و قطعات آن را با یک پارچه نمدار تمیز کنید.

هیچ کدام از قطعات جارو برقی را در ماشین ظرف شویی نشویید.

## تمیز کردن فیلتر خروجی HEPA

برای حفظ عملکرد بهینه دستگاه، هر بار که کیسه جاروبرقی را خالی می کنید، فیلترهای HEPA را تمیز کنید.

۱ برای باز کردن حفاظ فیلتر خروجی HEPA، زیانه ها را بگیرید و حفاظ را به طرف بالا بکشید تا آن را از دستگاه جدا کنید (شکل ۱۷).

۲ فیلتر خروجی HEPA را بیرون بیاورید.

۳ بخش پلیسه دار فیلتر HEPA خروجی را زیر آب گرم که جریان آن ملایم باشد بگیرید.

- فیلتر را به نحوی نگاه دارید که بخش پلیسه دار به طرف بالا قرار گیرد و آب بصورت موازی در پلیسه ها جریان پیدا کند. فیلتر را در زاویه ای نگاه دارید که آب گرد و غبار داخل پلیسه ها را هم تمیز نماید (شکل ۱۸).

- فیلتر را ۱۸۰ درجه بچرخانید و بگذارید تا آب در طول پلیسه های از سمت مخالف جریان یابد (شکل ۱۹).

- این کار را تا زمانی که فیلتر تمیز شود ادامه دهید.

هرگز فیلتر HEPA خروجی را با برس تمیز نکنید (شکل ۲۰).

توجه: تمیز کردن فیلتر رنگ آن را به رنگ اصلی باز نمی گرداند، اما قدرت پاکسازی آن دوباره بازسازی می شود.

۴ با دقت آب روی فیلتر خروجی HEPA را با تکان دادن پاک کنید. قبل از قرار دادن فیلتر خروجی HEPA در جارو برقی، اجازه دهید که فیلتر کاملاً خشک شود.

۵ فیلتر خروجی HEPA را مجدداً در دستگاه قرار دهید.

۶ برای بستن حفاظ فیلتر خروجی HEPA، اول زیانه های قرار گرفته در بالای حفاظ را با دستگاه تنظیم کنید (۱). سپس زیانه ها را به طرف پایین فشار دهید تا حفاظ در محل خود قفل شود (۲) ("کلیک") (شکل ۲۱).

## تمیز کردن فیلتر حفاظت موتور

برای حفظ عملکرد بهینه دستگاه، فیلتر حفاظت موتور را حداقل سالی یکبار تمیز کنید.

۱ قاب را بطرف بالا کشیده تا باز شود (شکل ۲۲).

۲ نگهدارنده کیسه را از دستگاه خارج کنید. (شکل ۲۳)

هنگامی که کیسه را از دستگاه بیرون می کشید، مطمئن شوید که کیسه را به طرف بالا نگاه داشته اید.

#### احتیاط

- هرگز اشیاء بزرگ مانند این را جارو نکنید چون باعث مسدود شدن جریان هوا در لوله یا شیلنگ می گردد.
- هنگامی که از دستگاه برای جارو کردن خاکستر، ماسه نرم، آهک، گرد و غبار سیمان و موادی مشابه استفاده می کنید، منافذ ریز فیلتر گرد و غبار و فیلتر حفاظت موتور دستگاه مسدود می شوند. اگر متوجه کاهش زیاد قدرت مکش شدید، کیسه جارو را تعویض کرده و فیلتر حفاظت موتور را تمیز کنید.
- همیشه دوشاخه دستگاه را قبل از تمیز کردن یا تعویض فیلترها از پریز بیرون بکشید.
- هرگز از دستگاه بدون کیسه جارو یا فیلتر حفاظت موتور استفاده نکنید. این کار می تواند باعث آسیب رسیدن به موتور گردیده و عمر دستگاه را کوتاه کند. توصیه می کنیم از کیسه های گرد و غبار دولایه Philips s-bag® استفاده کنید.

#### میدان الکترومغناطیسی (EMF)

این دستگاه Philips از کلیه استانداردهای میدان الکترو مغناطیسی (EMF) پیروی می کند. در صورت استفاده صحیح و بهره گیری از دستورالعمل های موجود در این دفترچه راهنما، طبق شواهد علمی موجود کنونی، استفاده ایمن از این دستگاه امکان پذیر می باشد.

#### آماده ساختن دستگاه برای استفاده

##### شیلنگ

- ۱ برای وصل کردن شیلنگ، آن را در دستگاه جا بزنید ("کلیک") (شکل ۲).
- ۲ برای جدا کردن شیلنگ، (۱) دکمه های آزاد کردن را فشار داده و (۲) رابط شیلنگ را از محفظه اتصال شیلنگ بیرون بکشید. (شکل ۳)

##### لوله تلسکوپی

- ۱ برای وصل کردن قطعات لوله به دستگاه شیلنگ، بخش نازک را در بخش پهنتر جا زده و آن را قدری بچرخانید (شکل ۴).
- ۲ لوله تلسکوپی را به اندازه طولی که هنگام جارو کردن راحت می باشید تنظیم کنید. کشویی روی لوله را به طرف بالا حرکت داده (۱) و بخش پایین لوله را به طرف پایین حرکت داده یا آن را بطرف بالا بکشید (۲) (شکل ۵).

##### دهانک ترکیبی

- می توانید از دهانک ترکیبی روی انواع فرش (نوار برس تو رفته باشد) و روی کف های سخت استفاده کرد (نوار برس بیرون آمده باشد).
- برای تمیز کردن کف، سوئیچ گهواره ای در بالای دهانک را با پای خود فشار دهید تا نوار برس از درون محفظه بیرون بیاید. (شکل ۶)
  - برای تمیز کردن فرش، سوئیچ گهواره ایی در طرف دیگر را فشار داده تا برس نواری در محفظه محو گردد. (شکل ۷)

##### دهانک کف زمین (فقط مدل های خاص)

- دهانک کف سخت برای تمیز کردن نرم کفهای سخت طراحی شده است (شکل ۸).

##### نگهدارنده ایزار

شما می توانید هر بار دو وسیله جانبی را به طور همزمان در گیره لوازم ذخیره کنید.

- ۱ گیره لوازم جانبی را به لوله وصل کنید (۱) و سپس شیلنگ را به گیره لوازم جانبی وصل کنید (۲) (شکل ۹).
- ۲ برای ذخیره لوازم جانبی در گیره لوازم جانبی، آنها را در گیره فشار دهید (شکل ۱۰).

##### دهانک شکاف، دهانک کوچک و برس کوچک

- ۱ شما می توانید دهانک کوچک، دهانک شکاف یا برس کوچک را مستقیماً به دستگاه وصل کنید. برای انجام این کار دسته یا لوله را در حالی که می چرخانید به وسیله مورد نظر وصل کنید. (شکل ۱۱)
- از دهانک شکاف برای تمیز کردن گوشه های باریک یا مکانهای دور از دسترس استفاده کنید.
- از یک دهانک کوچک برای جارو کردن مناطق کوچک استفاده کنید، مثلاً صندلی و مبلی.
- از برس کوچک برای تمیز کردن کامپیوتر، قفسه های کتاب و موارد مشابه استفاده کنید.

بخط خرید این دستگاه به شما تبریک می گوئیم و به Philips خوش آمدید! برای استفاده کامل از پشتیبانی ارائه شده Philips، محصول خود را در [www.philips.com/welcome](http://www.philips.com/welcome) ثبت کنید.

### شرح کلی (شکل ۱)

- ۱ روکش
- ۲ دکمه روشن/خاموش
- ۳ نشانگر پر بودن کیسه جارو
- ۴ کنترل قدرت مکش الکترونیکی
- ۵ دکمه جمع کردن سیم
- ۶ چرخ عقب
- ۷ اتصال شیلنگ
- ۸ مجرای اتصال شیلنگ
- ۹ زبانه آزاد کردن قاب
- ۱۰ دستگیره
- ۱۱ نگهدارنده کیسه گرد و خاک
- ۱۲ کیسه گرد و غبار
- ۱۳ فیلتر حفاظت موتور
- ۱۴ چرخ گردان
- ۱۵ پلاک مدل
- ۱۶ شکاف ذخیره کردن
- ۱۷ فیلتر خروجی HEPA
- ۱۸ سوئیچ گهواره ایی برای حالت فرش/کف اتاق
- ۱۹ دهانک ترکیبی
- ۲۰ شکاف پارکینگ
- ۲۱ سیم برق با دوشاخه
- ۲۲ حفاظ فیلتر آگزوز
- ۲۳ دهانک شکاف
- ۲۴ دهانک کوچک
- ۲۵ دهانک کف زمین (فقط مدل های خاص)
- ۲۶ برس کوچک
- ۲۷ نگهدارنده لوازم
- ۲۸ لوله تلسکوپی
- ۲۹ شیلنگ با دستگیره و کشویی تنظیم قدرت مکش

### مهم

این راهنمای کاربر را قبل از استفاده از دستگاه با دقت بخوانید و آنها را در محلی برای مراجعات آینده نگهداری کنید.

#### خطر

- هرگز آب یا هرگونه مایع دیگر را جارو نکنید. هرگز مواد قابل اشتعال و هرگز خاکستر را تا زمانی که سرد نشده باشد جارو نکنید.
- هشدار
- قبل از اتصال دستگاه به برق دقت کنید که ولتاژ مشخص شده روی دستگاه با برق محل هماهنگی داشته باشد.
- در صورتی که سیم و دو شاخه و یا خود دستگاه آسیب دیده باشد از دستگاه استفاده نکنید.
- اگر سیم برق صدمه دیده است، باید توسط شرکت Philips یا مرکز خدمات مورد تایید شرکت Philips یا افرادی تایید شده دیگری برای اجتناب از ایجاد خطر، تعویض شود.
- این دستگاه برای استفاده اشخاصی که دارای وضعیت ضعیف جسمانی (شامل کودکان)، حساسیت و یا عقب ماندگی ذهنی و یا عدم داشتن تجربه و درک صحیح از آن هستند نمی باشد، مگر اینکه اینگونه اشخاص تحت آموزش و یا سرپرستی توسط افرادی که مسئولیت حفاظت از آنها را دارند در رابطه با این دستگاه قرار داشته باشند.
- کودکان باید تحت مراقبت باشند تا مطمئن شوید که با دستگاه بازی نمی کنند. اجازه ندهید کودکان بدون نظارت از دستگاه استفاده کنند.
- هنگامی که جارو برقی روشن می باشد و شیلنگ به جارو وصل شده است، شیلنگ یا ابزار را به طرف چشمان یا گوش نگرفته یا آن را در دهان خود نگذارید.

